



# ATG Electronics® Access Area Light

## USER GUIDE



### NOTE:

Please read this entire manual to fully understand and safely use the luminaire.

The products can be used at the voltage of 100-277VAC/200-480VAC, 50/60Hz, suitable for indoor and outdoor, moistureproof and dustproof. Specifications are subject to change without notice. Please visit [www.atgelectronics.com](http://www.atgelectronics.com) for the most recent user guide versions.

### INCLUDED IN THIS BOX

ATG Electronics® Access Area Light ,1 PCs

User Guide, 1 Set

### UNPACKING

- 1) Unpack and carefully examine the product.
- 2) Report any damage and save all packing materials if any part(s) were damaged during shipping.
- 3) Do not attempt to use this apparatus if it is damaged.

### INSTALLATION INSTRUCTIONS

- 1) CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- 2) The product should be installed and operated by a qualified electrician or technician in accordance with relevant local codes.
- 3) Risk of electric shock. Ensure that main power source is off when wiring or soldering the sections of the product.


### MAINTENANCE

- 1) Disconnect the product from the power supply prior to cleaning.
- 2) Use a dry or slightly moistened cloth for cleaning.
- 3) Never use any chemicals or abrasive materials for cleaning.


### INSTALLATION STEPS

#### 1. Slipfitter Mount


- 1) Put the mounting slipfitter to the lamp pole.

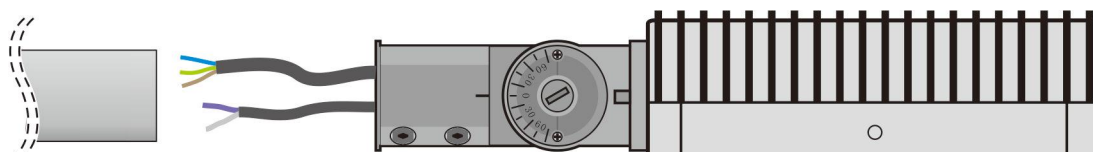

- 2) Tighten mounting screws.

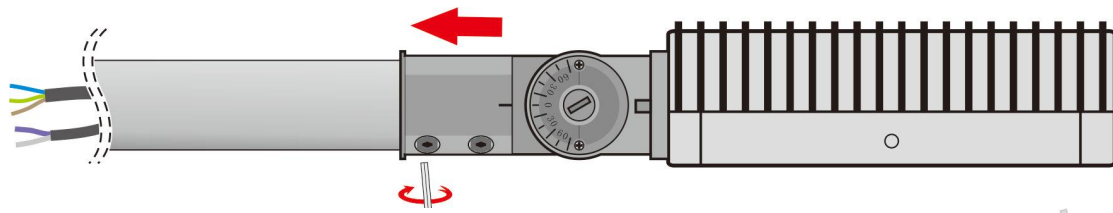


- 3) Angle adjustment.

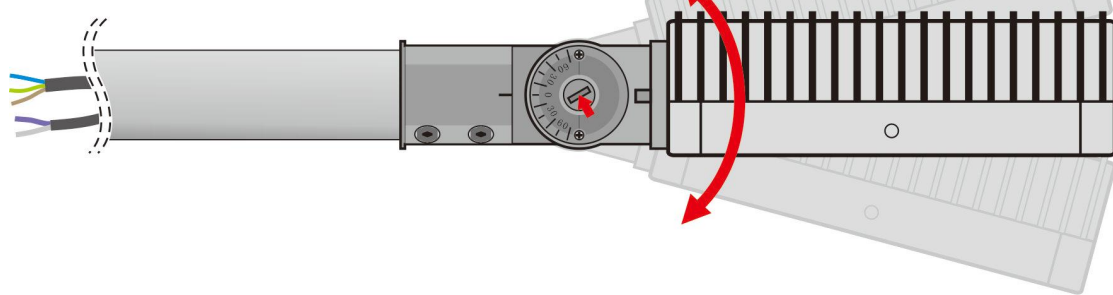

- 4) Connect the source VAC to driver VAC in and the dimming source to driver DIM in.

## 2. Arm Mount

- 1) Fix the Access Area Light to dry wall with screws.

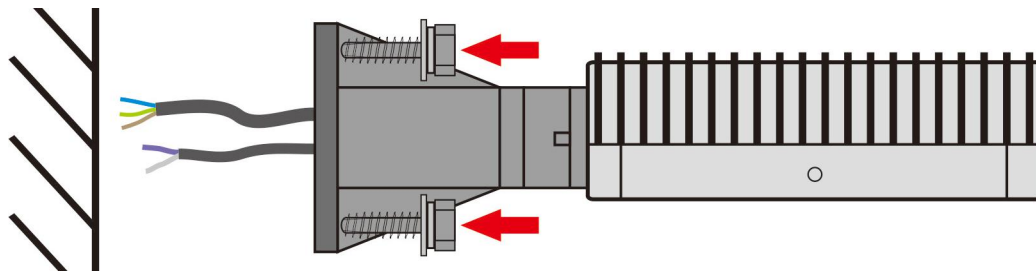

- 2) Connect the source VAC to driver VAC in and the dimming source to driver DIM in.

